


Soft Boot/Tonneau Cover - Kit

Saab 900 Convertible Tonneau Cover Fitting Kit - Instructions

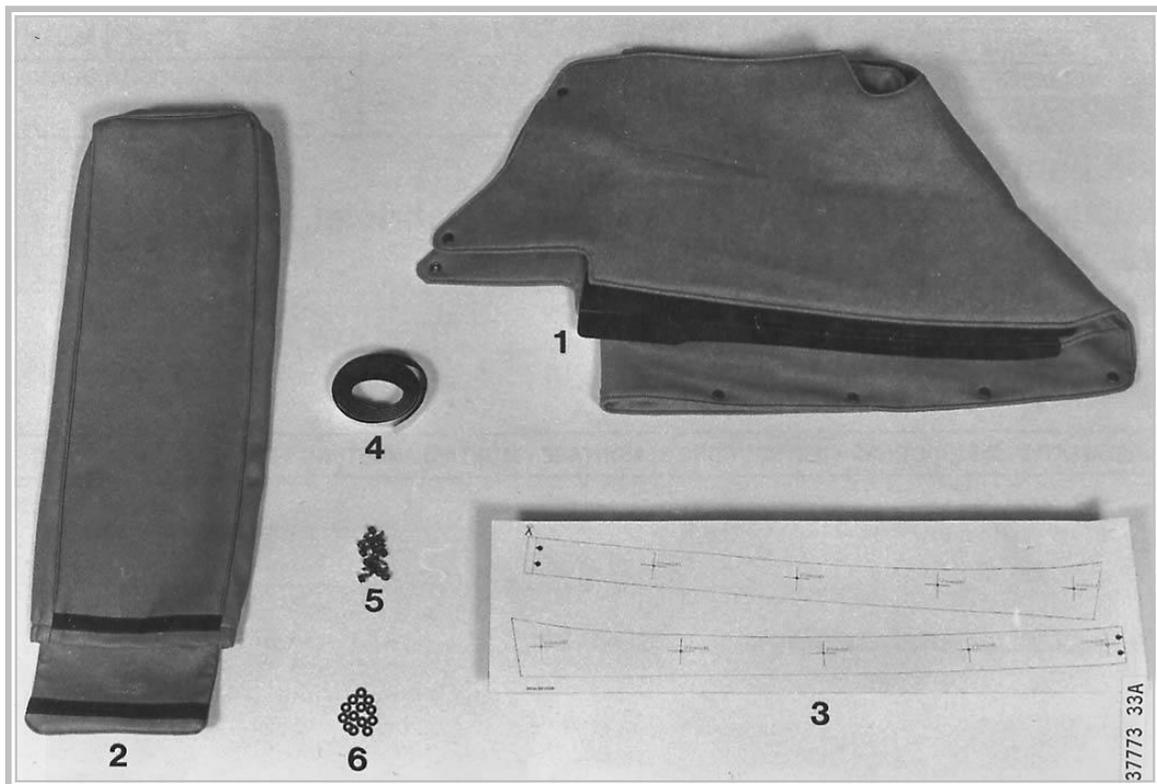

Fitting Kit Contents

1. Soft boot cover
2. Storage bag
3. Template
4. Velcro strip
5. Press-stud fasteners, (13 of)
6. Seal, (13 of)

Fitting Kit Application Instructions

1

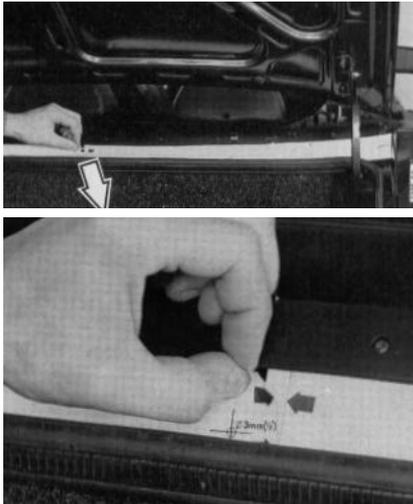


Figure 1

- Cut out the template.
- Open the luggage compartment lid, and fit the two parts to the body above the sealing strip on the top edge of the luggage compartment, so that they overlap as shown in Figure 1.
- The upper edge of the drilling template must butt up against the covering strip of the convertible top.
- Tape the template in position.

2

- Mark out the nine holes indicated on the template, using a centre punch.



Figure 2

3



Figure 3

- Remove the template and drill the 3 mm (1/8") holes as marked.
- Protect the rubber strip with paper or something similar.

4

- Apply corrosion protection to the drilled holes.
- Screw the push-button brackets and the seals into the drilled holes



Figure 4

5



Figure 5

- Clean the top edge of the support rail behind the backrest cushion. Use a solvent such as benzine and wipe dry with a rag.

6

- Cut a piece of Velcro strip from the roll. 1000 mm (39") for -M87, and 860 mm (34") for M88-.
- Remove a little of the protective backing film, and attach the Velcro strip to the edge of the support rail, as shown in the Figure.
- The Velcro strip should be attached at room temperature.

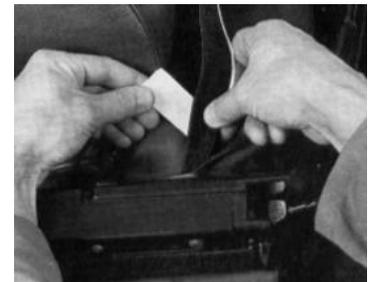


Figure 6

7



Figure 7

- Remove the protective backing film from the Velcro strip, and attach the strip along the entire upper edge of the support rail.
- Fold down the Velcro strip over the longitudinal edge of the support rail, and press with the fingers against the strip so that it adheres well.

8

- Attach the soft boot cover at its rear edge with the press-studs, and bring together the Velcro strips on the soft boot cover and the supporting rail.
- Pull the sides of the soft boot cover forwards and over the sides of the cover over the safety belt. Pull sufficiently for the soft boot cover to make contact with the cover along the whole of its edge.



Figure 8

9



Figure 9

- Mark out for drilling and for the attachment of the two press-stud fasteners on the safety belt covers on either side of the car.
- Check that the sides of the soft boot cover are tensioned equally on both sides of the car, and that there are no folds along the sides of the soft boot cover.

10

- Drill holes using a 3 mm (1/8") bit at the points marked on the safety belt covers.
- Screw the press-stud fasteners into the covers.

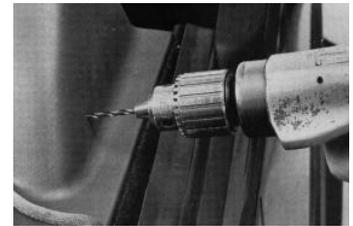


Figure 10

11

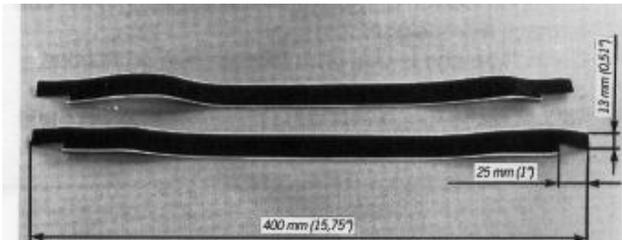


Figure 11

- Cut two 400 mm (15.75") lengths of Velcro strip from the roll, and cut away a piece from each end as shown in Figure 11.


12

- Fold back the sides of the soft boot cover, and clean the rails on the roof member on both sides of the convertible top frame. Use a solvent, and wipe dry with a rag.



Figure 12

13

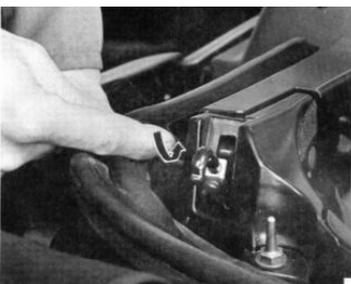

- Remove the protective backing film from the Velcro strips, and attach the strips to the rails.
- Fold down and attach the cut-away ends of the strips to the underside of the rail. Fold down the longitudinal side of the strip over the edge of the rail towards the rubber strip.



Figure 13

- Press with the fingers against the Velcro strips so that they adhere well.

14

- Cut two 80 mm (3") lengths of Velcro strip from the roll.

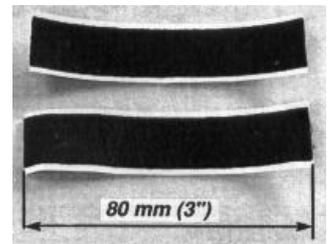


Figure 14

15



- Clean the rear/upper part of the side trim, close to the sides of the backrest cushion. Use a solvent, and wipe dry with a rag.
- Remove the protective backing film from the Velcro strips, and attach them as shown in the Figure.
- Press with the fingers against the Velcro strips so that they adhere well.



Figure 15

16

- Install the soft boot cover, and check that it fits correctly and that the Velcro strips adhere at all points. Place the operating instructions in the car.